

STANDARD CHECKS & MAINTANCE		
WHEELS AND TYRES		
	Tread wear	
	Inspect rims for dents	
	Tyre pressure	
	Tighten wheel nuts	
BRAKES		
	Handbrake travel	
	Adjust brakes	
	Inspect magnets	
	Inspect linings and adjust	
	Inspect magnets for uneven wear	
	Wheel bearings	
	Remove left front wheel and check brake shoe wear and brake adjustment.	
BODY		
	Tighten window screws	
	Test all exterior lights	
	Test for water leaks	
GAS SYSTEMS		
	Leak test	
	Check that the gas hoses are not perished	
	Operation of cooker	
	Operation of refrigerator	
INTERIOR		
	Security of appliances	
	240V test	
	Adjust cupboard catches	
	Check and lubricate windows if required	
	Check that the toilet flush mechanism works	
	Check the water pump works and all the taps and showers work	
	Clean the door and window seals and apply rubber conditioner	
	Check that the blinds all work	
CHASSIS		
	Check coupling bolts	
	Check suspension mounts	
	Springs and shackles checked for wear, outriggers, chassis rails, cross-members and A-frames checked for damage/fatigue	

LIGHTING AND ELECTRICAL		
	Check that the external lights work correctly	
	Check that all of the mains and battery powered lights work inside the caravan	
	Check that the battery is still holding a charge	
	12N, 12S (7-pin) or 13-pin connection cables, plugs and sockets for signs of wear or looseness. Clean contacts if necessary	
OTHER		
	Water tank mountings and hoses inspected for integrity and protection	
	Check air-conditioning tension bolts	
	Check condition of hot water anode	
	Jockey wheel and jacks lubricated for ease of operation	
	External traffic lights and wiring connections inspected.	
	Test brake away system	
	Test RV mounted brake controller	
WINDUP CARAVANS		
	Condition of the main winch cable.	
	Condition of the main winch clutch.	
	Condition of the 4 riser arm cables	
	Operation and lubrication of the several pulley wheels used to convey the 4 riser cables from the main winch.	
	Connection of the pushrods and lubrication.	
	Lubrication and condition of the 4 riser arms.	
	Ensuring floor plates are still well anchored on pushrod assemblies.	
5,000 MILES SERVICE		
	Replace wheel bearings	
	Replace tandem rocker-suspension shackle pins and bushes	
50,000 MILES SERVICE		
	Tandem rocker-suspension - replacing springs	
	Single Axle Leaf Springs - change the springs	
	Independent suspensions – change springs	
	Change the breakaway battery (or 2 years)	